


Installation manual of VNX-A driver

STEP 1




Remove five TORX10 screws holding the top cover and take off the lid.

STEP 2

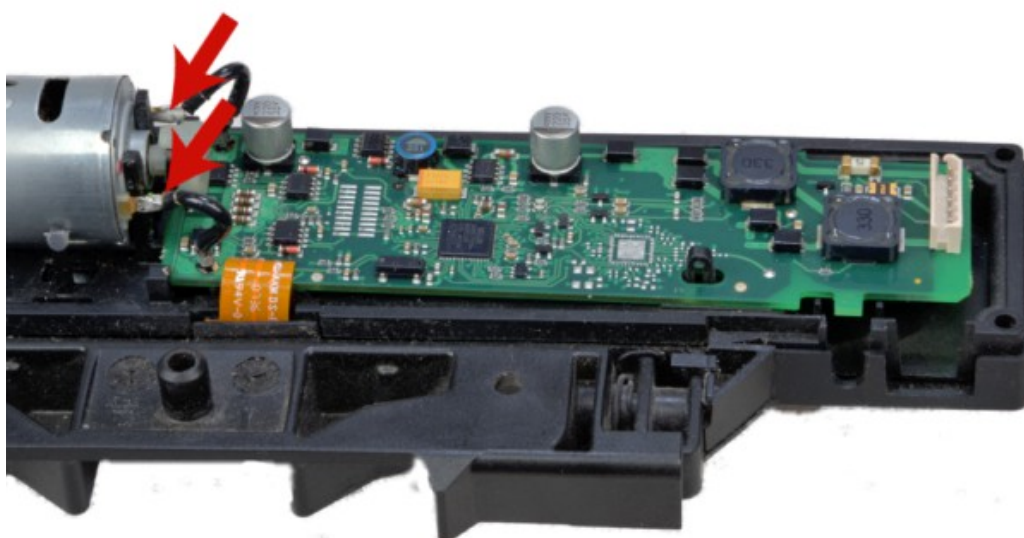

Unsolder the wires from electric motor.

STEP 3

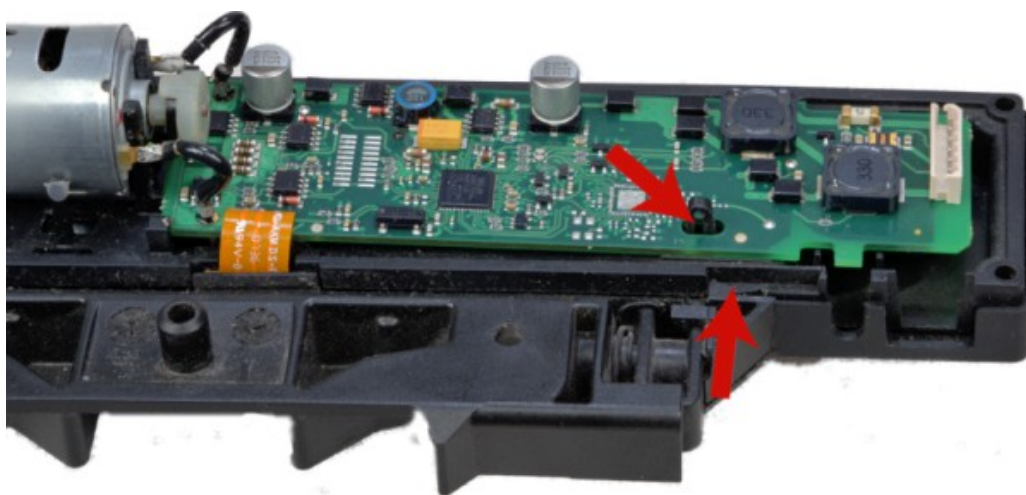


Remove the electronic module by pressing shown plastic snaps.

STEP 4



Disassembled module is ready for installation of VNX-A controller.

STEP 5

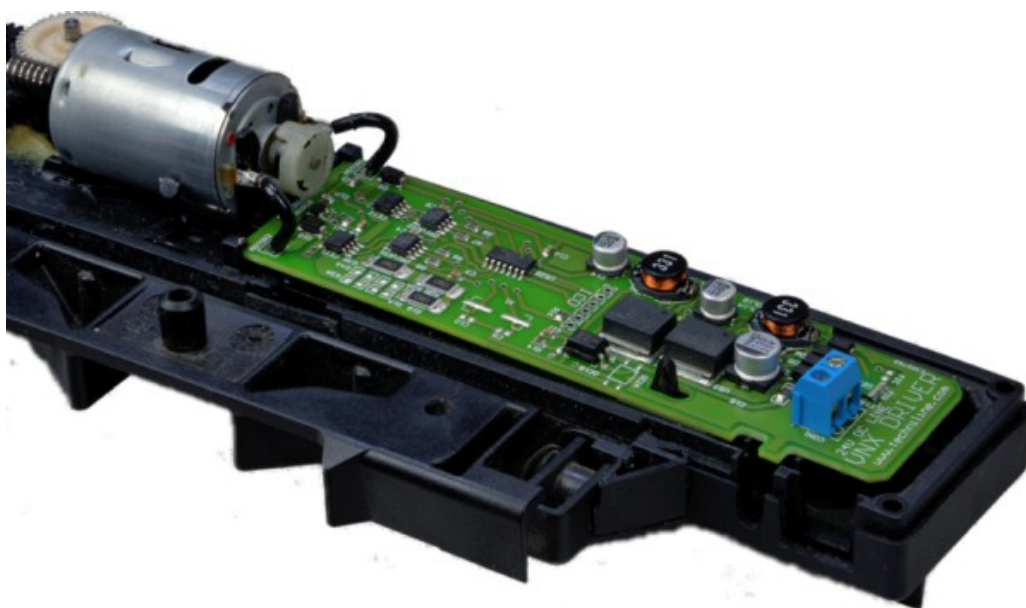

Install a VNX-A controller & solder the wires to the electric motor only (do not resolder the orange flat ribbon cable as it is to be extracted). Module is ready for operation. Assemble back the lid.